


### 3-5. Using the interior lights

## Interior lights list

Your Lexus is equipped with the illuminated entry system to assist in entering the vehicle. Owing to the function of the system, the lights shown in the following illustration automatically turn on/off according to the presence of the electronic key, whether the doors are locked/unlocked, whether the doors are opened/closed, and the “ENGINE START STOP” switch mode.

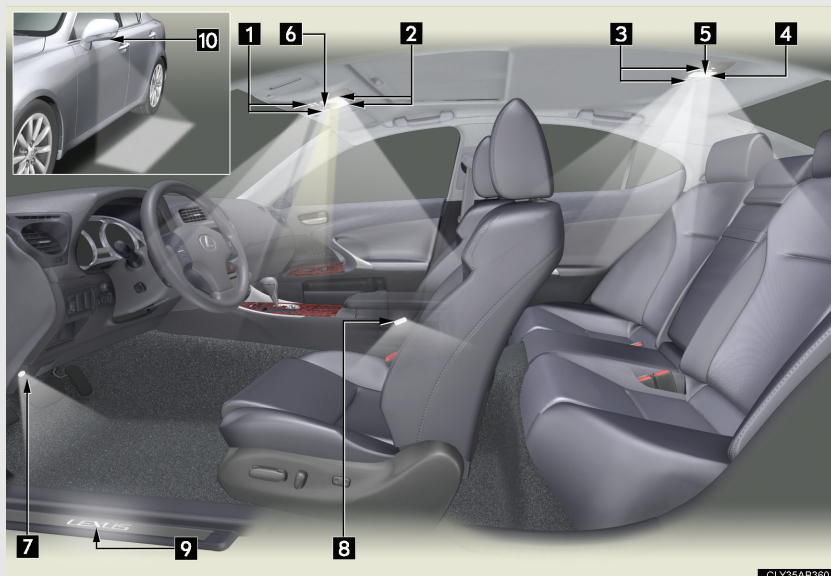

- 1 Front personal lights (→P. 331)
- 2 Front interior lights (→P. 331)
- 3 Rear personal lights (→P. 331)
- 4 Rear interior light
- 5 Rear overhead courtesy light
- 6 Shift lever light (when the “ENGINE START STOP” switch is in ACCESSORY or IGNITION ON mode)
- 7 Front footwell lights

- 8 Front door courtesy light
- 9 Front scuff lights (if equipped)
- 10 Outer foot lights

Turning the instrument panel light control knob fully to the left disables the shift lever lights and front footwell lights.

---

#### ■ To prevent the battery from being discharged

If the interior lights remain on when the door is not fully closed and the interior light switch (door position on/off) is on, the lights will go off automatically after 20 minutes.

#### ■ Customization that can be configured at Lexus dealer

Setting (e.g. The time elapsed before lights turn off) can be changed. (Customizable features →P. 550)

## Interior lights

### ► Models without a moon roof



- 1 Door position on/off
- 2 On/off

### ► Models with a moon roof



- 1 Door position on/off
- 2 On/off

## Personal lights

### ► Front (models without a moon roof)




On/off

► Front (models with a moon roof)



On/off

► Rear

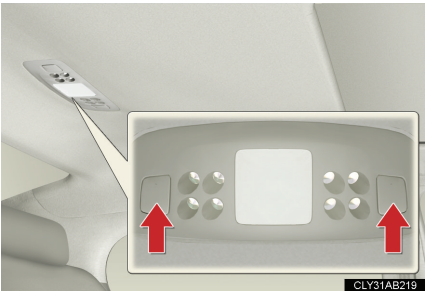

On/off